

For maintaining a quieter living environment, drivers, vehicle owners and drivers' employers should arrange your vehicle to be regularly maintained and pay particular attention to the following during maintenance:

Engine & Engine Compartment

- Regularly service and tune the engine to maintain the best operating condition
- Do not use non-standard blow-off valves and waste-gates on all turbo-charged / super-charged engines
- Ensure that intake air ducting is not damaged or loose
- Do not alter engine settings or the design of the air intake and piping system
- Ensure fan belts and idle pulleys are in their proper working condition to avoid noise arising from misalignment or slackness
- Ensure cooling fan blades and radiator shield are in their proper working condition to prevent noise from any misalignment or contact
- Ensure that engine mounting rubbers are not damaged or worn to prevent excessive engine vibration and noise
- Ensure to vent blow-off valves and waste-gate valves into the exhaust system upstream of any mufflers instead of directly into the atmosphere







