
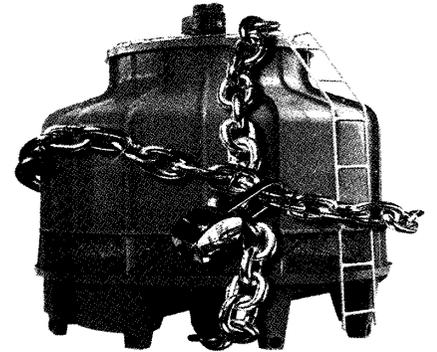
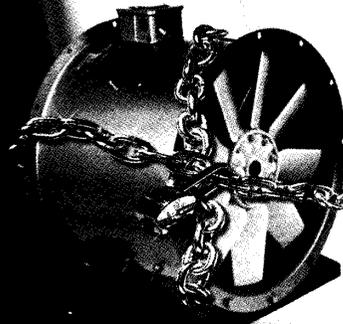


GOOD PRACTICES ON VENTILATION SYSTEM NOISE CONTROL

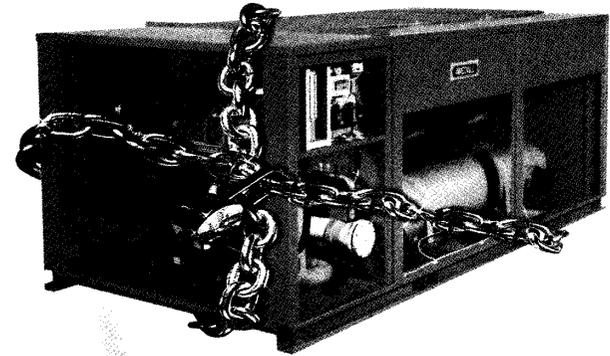

**GOOD PRACTICES
ON
VENTILATION SYSTEM NOISE CONTROL**

Environmental Protection Department

April 2006

(Download Version)

The inclusion of any information of any company or product or reference to brand names of any particular product in this booklet does not in any way imply recommendation or endorsement by the Government of Hong Kong Special Administrative Region (the Government). The inclusion or reference is for demonstration purpose only and the non-inclusion of any product or company herein shall not be construed as disapproval of the product or company by the Government. The data regarding any product herein have been certified to be accurate by relevant manufacturers or their authorized agents or representatives. However, no warranty or guarantee whatsoever is or shall be construed as being given by the Government in respect of any product referred to herein. Readers are advised to seek independent experts or technical advice regarding the operation, use, installation, maintenance or otherwise of any product referred to herein.

CONTENTS

	<i>Page No.</i>
1. INTRODUCTION	7
2. QUICK REFERENCE GUIDE	8
3. PLANNING AGAINST NOISE PROBLEMS	9
3.1 Positioning of Equipment	9
3.2 Selection of Quiet Equipment	10
3.3 Scheduled Maintenance	10
4. PROBLEMS AND PRACTICAL REMEDIES ON VENTILATION SYSTEM NOISE	11
4.1 Air-borne Noise from Air-cooled Chillers	11
4.2 Structure-borne Noise from Air-cooled Chillers	14
4.3 Air-borne Noise from Water Cooling Towers	16
4.4 Structure-borne Noise from Water Cooling Towers	19
4.5 Air-borne Noise from Fans	21
4.6 Structure-borne Noise from Fans	24
4.7 Air-borne Noise from Ducts	26
4.8 Important Note	28
5. RECOMMENDED PRACTICAL REMEDIES FOR DIFFERENT EXCEEDANCE LEVELS	29
6. GLOSSARY OF ACOUSTIC TERMINOLOGY	30

APPENDICES

	<i>Page No.</i>
I. STATUTORY CONTROL OVER NOISE	31
II. NOISE PREDICTION	32
III. TYPICAL SOUND POWER LEVELS OF VENTILATION EQUIPMENT	36
IV. COMPLETE ENCLOSURES	37
V. PARTIAL ENCLOSURES	38
VI. BARRIERS	39
VII. INERTIA BLOCKS	40
VIII. VIBRATION ISOLATORS	41
IX. SILENCERS	44
X. FLOATING FLOORS	45
XI. VIBRATION IDENTIFICATION GUIDE	46
XII. GUIDELINES FOR CENTRIFUGAL AND AXIAL FAN INSTALLATIONS	47
XIII. EXAMPLES OF PRACTICAL NOISE CONTROL MEASURES	49
XIV. REFERENCE	50
XV. OTHER RELEVANT NOISE CONTROL MATERIALS	51
XVI. ADDRESSES AND TELEPHONE NUMBERS OF ENVIRONMENTAL PROTECTION DEPARTMENT'S OFFICES	52

LIST OF FIGURES

	<i>Page No.</i>
Figure 1 Complete Enclosure and Silencers	9
Figure 2 Air-borne Noise from Air-cooled Chillers	11
Figure 3 Barrier for Air-cooled Chillers	12
Figure 4 Floating Floor and Complete Enclosure for Air-cooled Chillers	13
Figure 5 Structure-borne Noise from Air-cooled Chillers	14
Figure 6 Vibration Isolation of Air-cooled Chillers	15
Figure 7 Air-borne Noise from Water Cooling Towers	16
Figure 8 Barrier and Vent Cowl for Water Cooling Towers	17
Figure 9 Complete Enclosure for Water Cooling Towers	18
Figure 10 Structure-borne Noise from Water Cooling Towers	19
Figure 11 Vibration Isolation of Water Cooling Towers	20
Figure 12 Air-borne Noise from Axial and Centrifugal Fans	21
Figure 13 Duct Diversion	22
Figure 14 Complete Enclosure and Silencers for Axial and Centrifugal Fans	23
Figure 15 Structure-borne Noise from Axial and Centrifugal Fans	24
Figure 16 Vibration Isolation of Axial and Centrifugal Fans	25
Figure 17 Duct Noise	26
Figure 18 Use of Damping Compound and Composite Lagging	27
Figure 19 Partial Enclosures	38
Figure 20 Barriers	39
Figure 21 Metal Springs	43
Figure 22 Isolation Pads	43
Figure 23 Silencers	44
Figure 24 Floating Floors	45
Figure 25 Guidelines for Centrifugal Fan Installations	47
Figure 26 Guidelines for Axial Fan Installations	48
Figure 27 Examples of Noise Control Measures	49

LIST OF TABLES

	<i>Page No.</i>
Table 1 Quick Reference Guide	8
Table 2 Recommended Practical Remedies	29
Table 3 Acceptable Noise Level (dB(A)), at 1m Facade	31
Table 4 Acceptable Noise Level (dB(A)), at an Internal Location	31
Table 5 Distance Attenuation at Given Distances	34
Table 6 Summation of Noise Levels	34
Table 7a Typical Sound Power Levels of Air-cooled Chillers	36
Table 7b Typical Sound Power Levels of Water Cooling Towers	36
Table 7c Typical Sound Power Levels of Fans	36
Table 8 Sound Insulation Materials for Enclosures	37
Table 9 Guide for Inertia Block Selection	40
Table 10 Minimum Static Deflection for Various Speeds of Machines	42
Table 11 Vibration Identification Guide	46

1. INTRODUCTION

Under the Noise Control Ordinance, noise generated from industrial or commercial activities should comply with the noise standards as stipulated in the relevant Technical Memorandum. It is generally recognized that operation of ventilation systems is one of these noisy activities. This booklet highlights the importance of planning against noise problems. It gives a brief description of potential noise problems associated with ventilation systems and provides guidelines on practical noise control measures that are applicable for new designs and for retrofitting existing designs.

The reader is reminded that compliance with the recommendations of this booklet does not necessarily mean compliance with the legislative requirements. Besides, the recommendations made in this booklet are not exhaustive. Alternative solutions to achieve the same results may exist. The reader is therefore recommended to consult independent experts throughout the process for ensuring the use of proper and cost effective noise control measures.

This booklet is designed mainly for reference by restaurant operators, building operators and those ventilation contractors who do not have sufficient noise control knowledge. Architects, building services engineers or other relevant professional parties may also use it as a checklist to ensure that proper measures will be taken to avoid noise problem in designing ventilation systems and locating ventilation equipment. The main contents are written in plain language illustrated by schematic diagrams for easy understanding by a layman. The focus is on practicable measures. More technical information can be found in appendices.

The reader is also advised that there is another booklet "Good Practices on Pumping System Noise Control" available which describes pumping system noise problems and possible solutions.

2. QUICK REFERENCE GUIDE

The following quick reference guide allows the reader to go directly to the relevant section or appendix concerning a particular problem.


Table 1 : Quick Reference Guide

Source of Noise Problem	Remedies	Relevant Section	Relevant Appendix
Chillers	- Barrier	4.1	VI
	- Partial enclosure	4.1	V
	- Complete enclosure	4.1	IV
	- Silencer	4.1	IX
	- Floating floor	4.1	X
	- Vibration isolator	4.2	VIII
Water Cooling Towers	- Barrier	4.3	VI
	- Partial enclosure	4.3	V
	- Complete enclosure	4.3	IV
	- Silencer	4.3	IX
	- Acoustic mat	4.3	--
	- Lined vent cowl	4.3	--
	- Vibration isolator	4.4	VIII
Fans	- Silencer	4.5	IX
	- Complete enclosure	4.5	IV
	- Fan speed reduction	4.5	--
	- Diverting	4.5	--
	- Inertia block	4.6	VII
	- Vibration isolator	4.6	VIII
	- Flexible connector	4.6	--
Ducts	- Stiffening	4.7	--
	- Damping material	4.7	--
	- Composite lagging	4.7	--

3. PLANNING AGAINST NOISE PROBLEMS

3.1 Positioning of Equipment

The installation position of equipment is of critical importance in determining the noise level at the affected noise sensitive receivers (e.g. residential buildings or schools). Where practicable, the equipment should be placed in a plant room with thick walls or at a much greater distance from the receiver or behind some large enough obstruction (e.g. a building or a barrier) such that the line of sight between the receiver and the equipment is blocked. If noisy equipment has to be placed near a receiver due to spatial or other constraints, sufficient noise control measures should be considered. Figure 1 shows a ventilation system of a new development, which has been equipped with adequate noise control measures in the design stage to prevent noise problems.

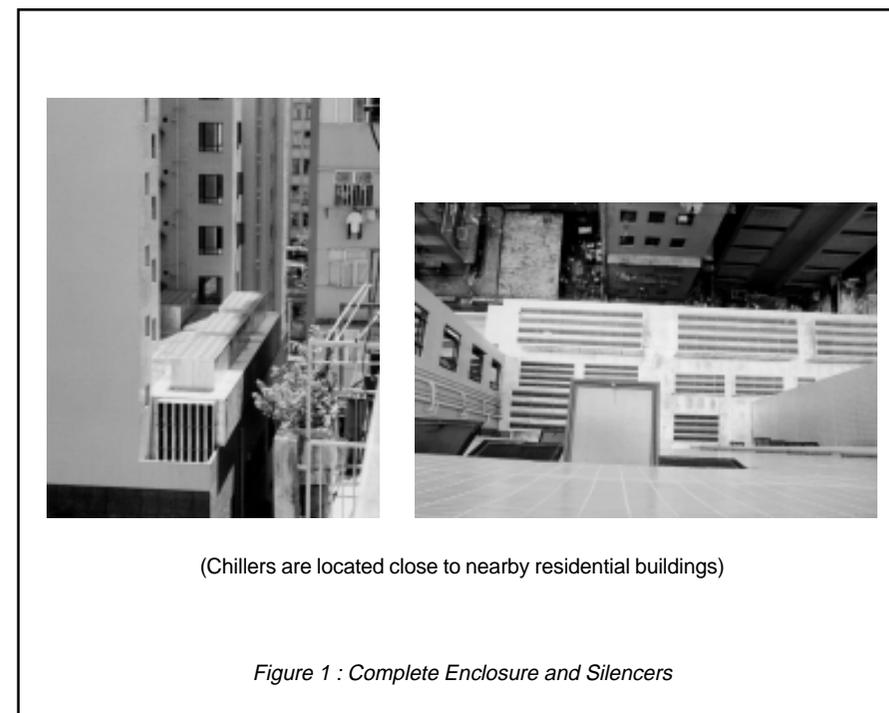

3.2 Selection of Quiet Equipment

On average, quieter equipment may generally be more expensive. However, it is almost always more economical in the long run to buy quieter equipment than to reduce noise by modification after purchase (e. g. silent type chillers or water cooling towers). Most equipment has a range of readily available noise control devices that are able to deal with the noise problems. It is advisable that noise levels specification is included when ordering new equipment. This allows the equipment suppliers to select appropriate equipment and optional noise control devices to suit the acoustic requirements.

3.3 Scheduled Maintenance


In order to prevent increasing noise produced by existing equipment, it is necessary to put in place a regularly scheduled equipment maintenance programme so that equipment is properly operated and serviced in order to maintain controlled level of noise and vibration. Maintenance may include lubricating moving parts, tightening loosen parts, replacing worn-out components or inspecting equipment alignment, etc. Vibration measurements at various frequencies may help to detect causes of excessive vibration or noise of a machine. A guide to vibration identification is given in Appendix XI.

4. PROBLEMS AND PRACTICAL REMEDIES ON VENTILATION SYSTEM NOISE

4.1 Air-borne Noise from Air-cooled Chillers

(A) Problems

Noise generated from air-cooled chillers may cause noise disturbance to nearby residents (see Fig. 2). It mainly comes from the air flow noise resulting from air turbulence at condenser fans and compressor noise during running and on/off cycle of refrigerant.

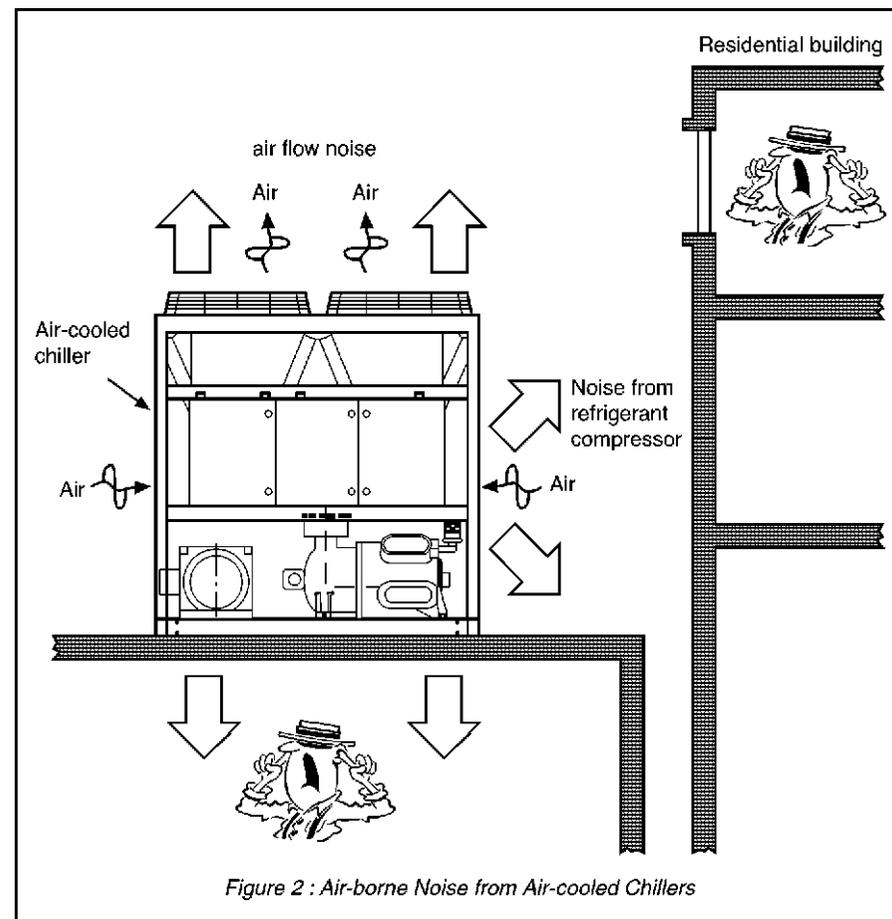



4.2 Structure-borne Noise from Air-cooled Chillers

(A) Problems

Vibration from an air-cooled chiller's operation may be transmitted indoors through building structure at points where the chiller is rigidly fixed to the structure without proper isolation (see Fig. 5). The vibration transmitted may activate the building structure to generate noise which causes noise disturbance to residents inside the building.

(B) Practical Remedies

- Provide vibration isolators to support an air-cooled chiller (see Fig. 6), thereby isolating it from the building structure (see App. VIII).

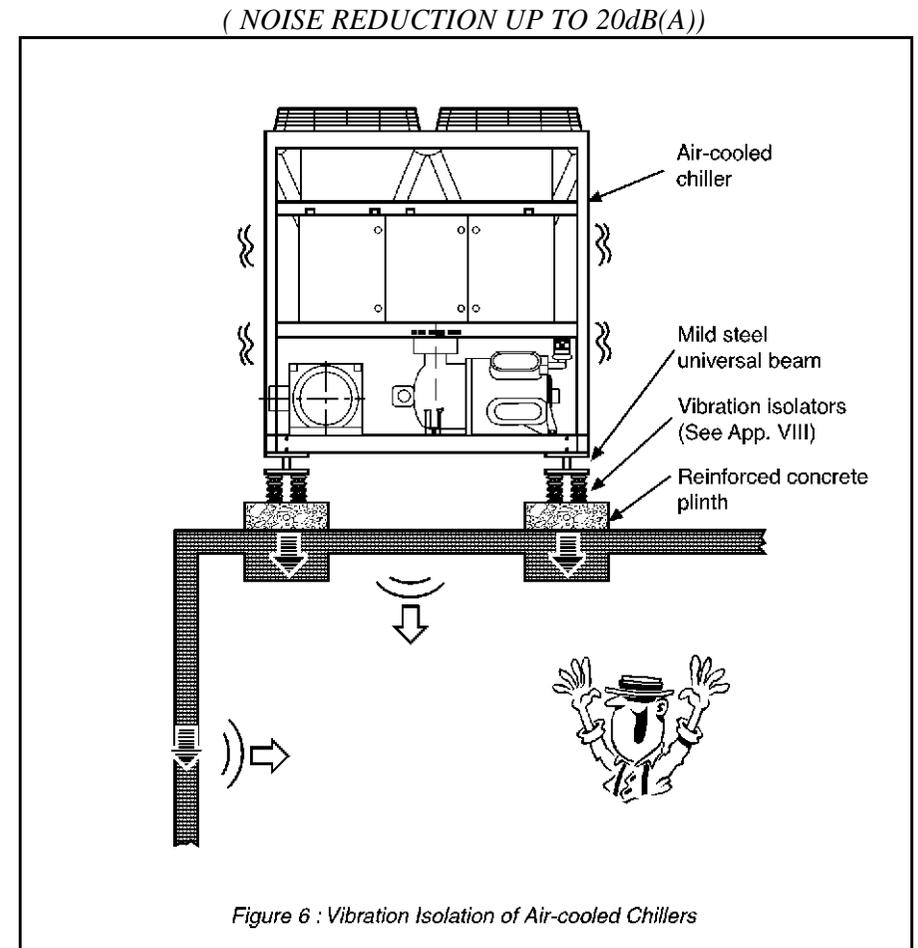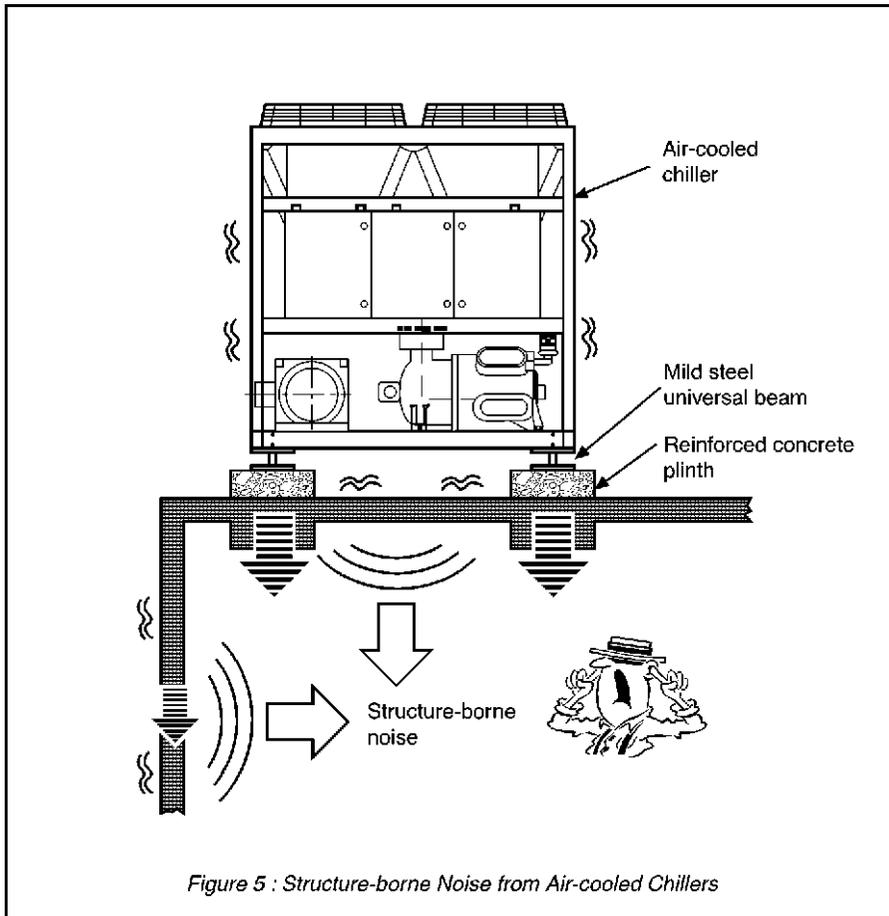



4.3 Air-borne Noise from Water Cooling Towers

(A) Problems

Noise generated from water cooling towers may cause disturbance to nearby residents (see Fig. 7). It mainly comes from the air flow noise resulting from air turbulence at condenser fans and water splashing noise due to water flowing through the tower into the collection basin.

(B) Practical Remedies

- Erect a barrier or partial enclosure between the plant and nearby residential buildings so as to block the noise propagation path (see App. VI and V), provide acoustic mat on the water surface so as to reduce the water splashing noise, and install acoustically lined vent cowl at fan discharge outlet (see Fig. 8), if not much noise reduction is required.

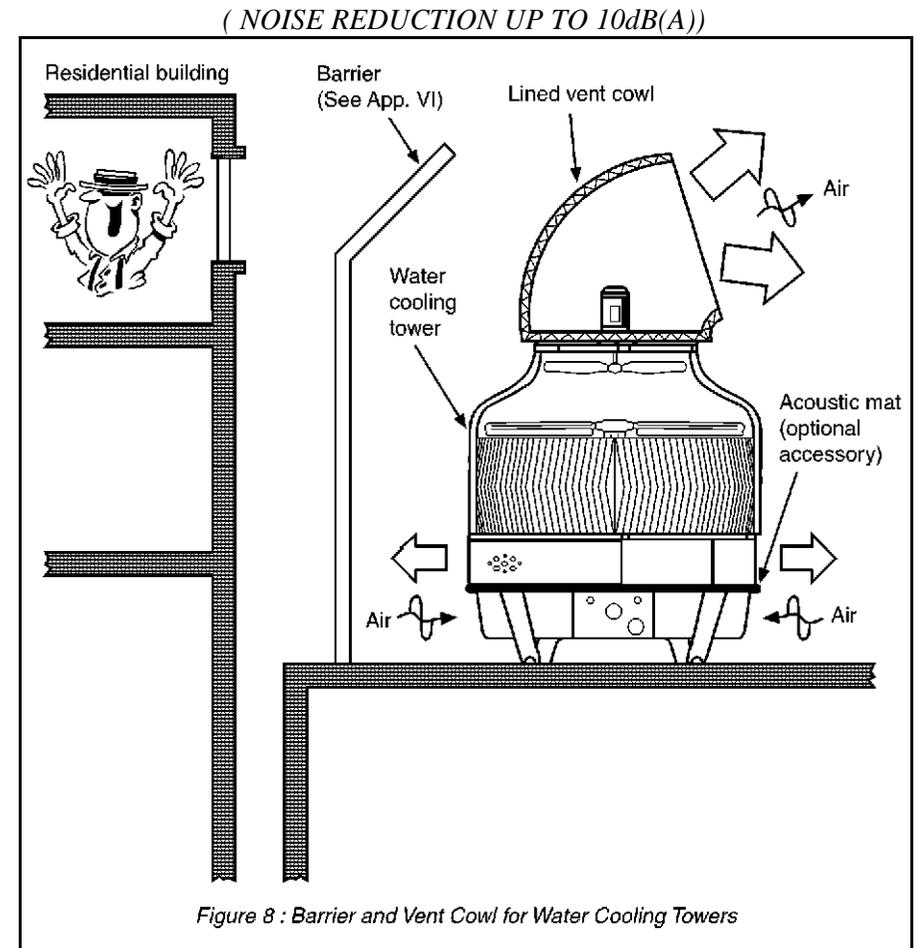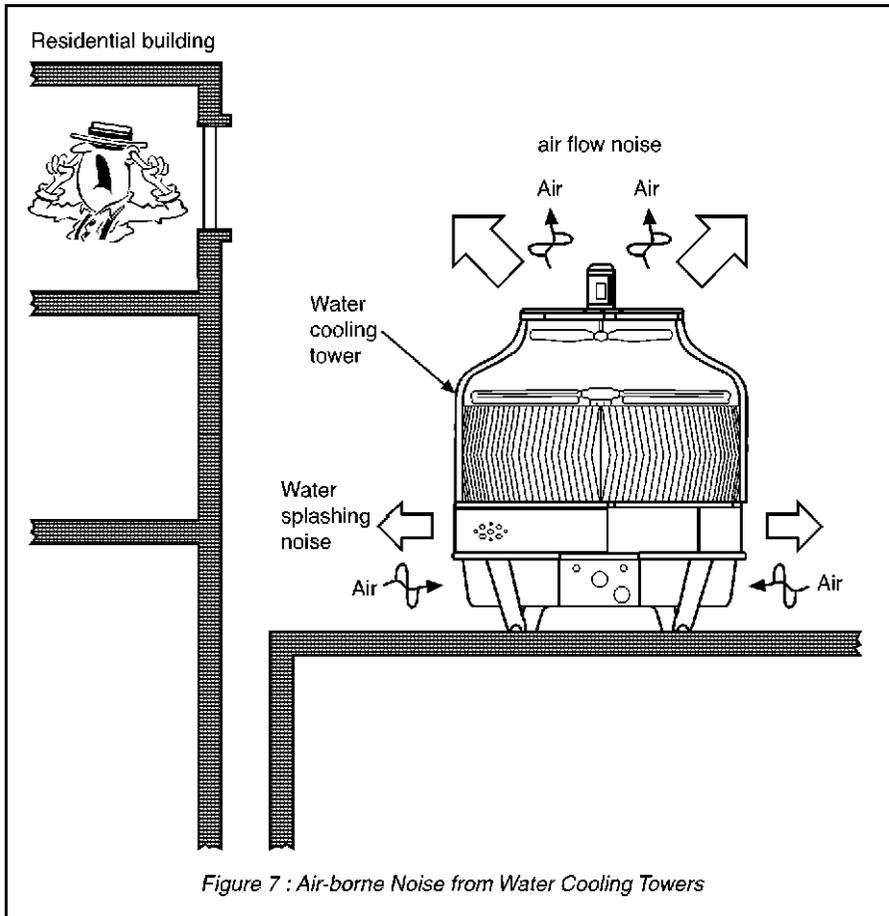



4.4 Structure-borne Noise from Water Cooling Towers

(B) Practical Remedies (Cont'd)

- Fabricate a complete enclosure with silencers at condenser fan outlets and at air inlets of the enclosure (see Fig. 9) so as to contain and absorb the noise from the water cooling tower (see App. IV) when there are noise sensitive receivers all around.

(A) Problems


Vibration from a water cooling tower's operation may be transmitted indoors through building structure at points where the cooling tower is rigidly fixed to the structure without proper isolation (see Fig. 10). The vibration transmitted may activate the building structure to generate noise which causes noise disturbance to residents inside the building.

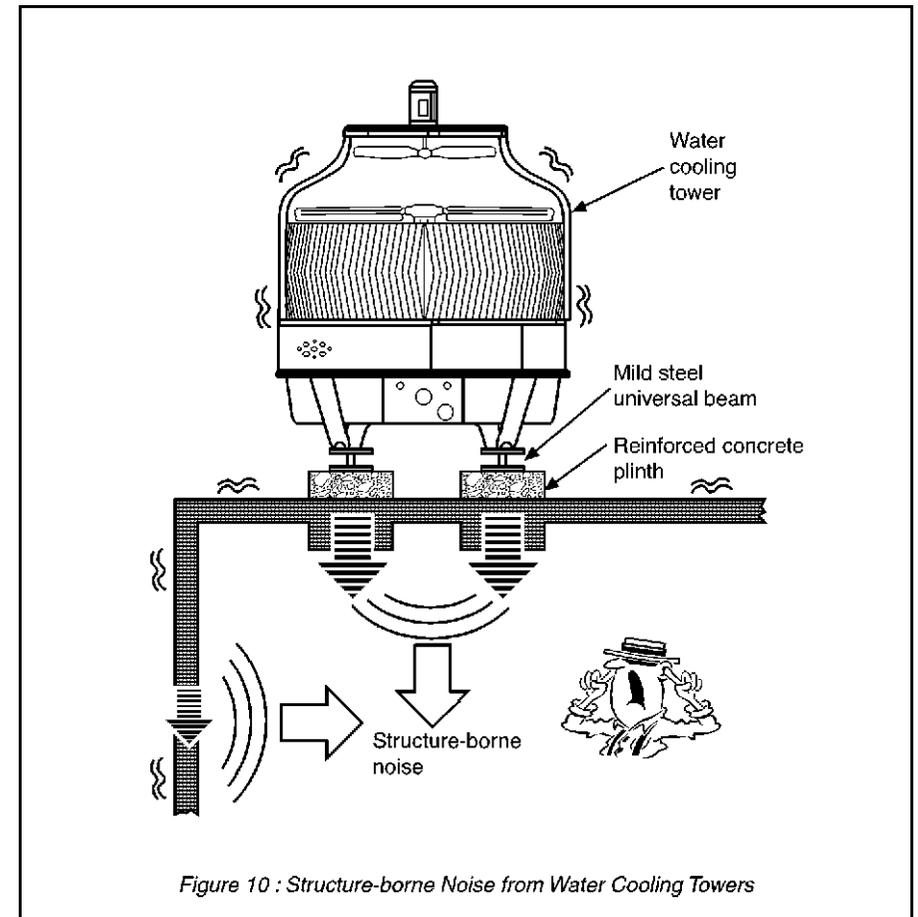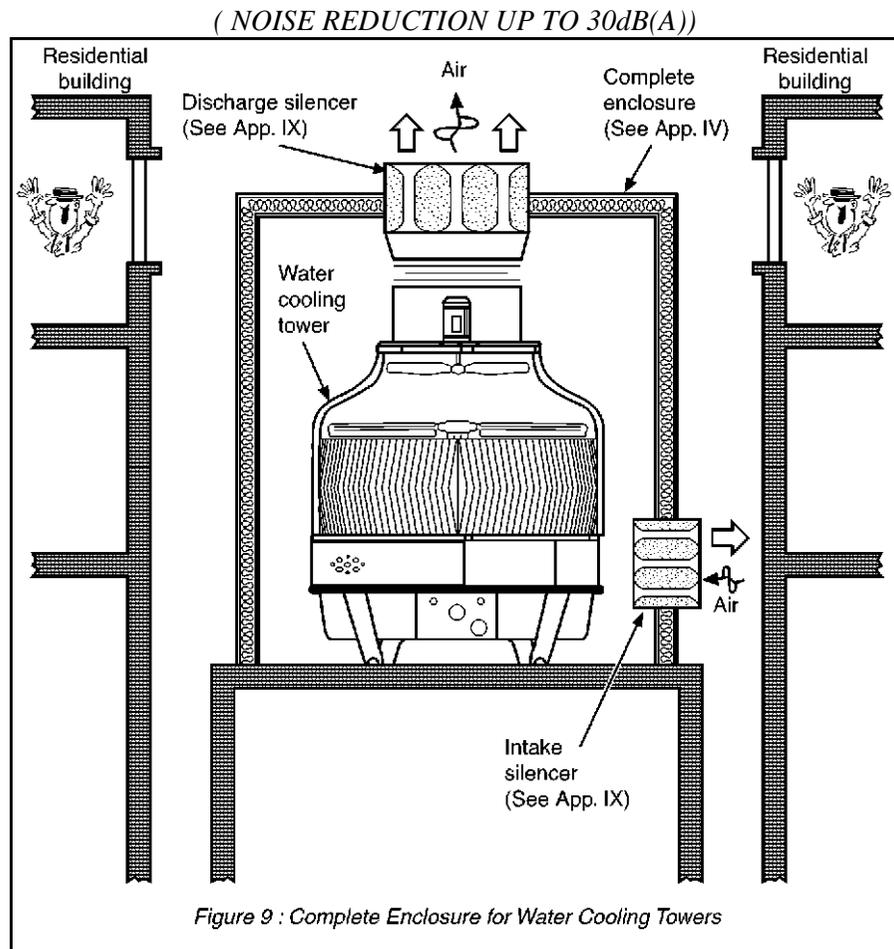

(B) Practical Remedies

- Provide vibration isolators to support a water cooling tower (see Fig. 11), thereby isolating it from the building structure (see App. VIII).


(NOISE REDUCTION UP TO 20dB(A))

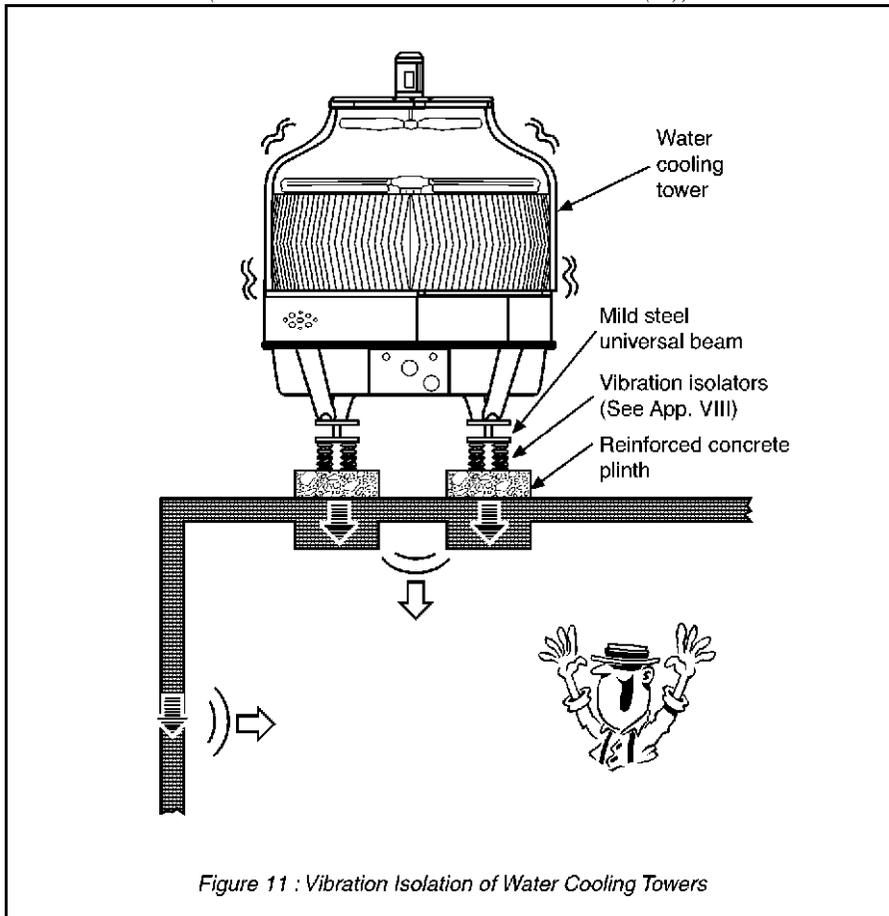

4.5 Air-borne Noise from Fans


(A) Problems

The noise problem associated with fans may cause noise disturbance to nearby residents (see Fig.12). It mainly comes from the interaction of flow turbulence and solid surface of fan blades, and blade / fan vibration. The noise is transmitted upstream and downstream in the connecting ducts or to the atmosphere through the fan case.

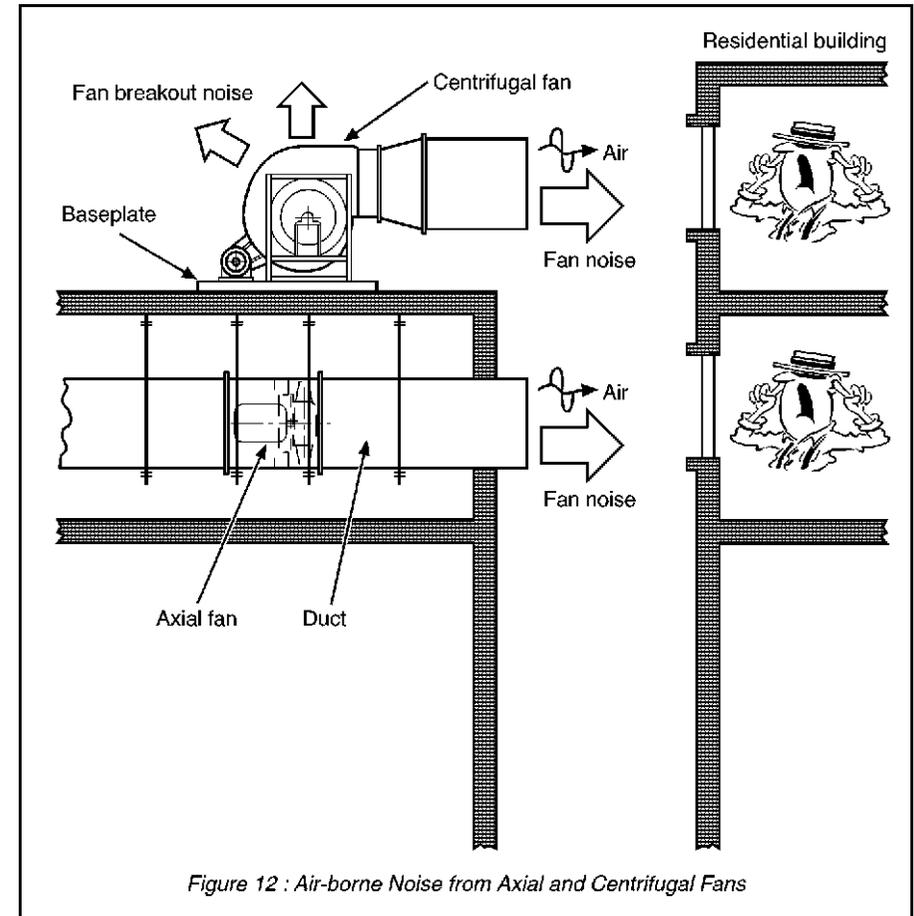


(B) Practical Remedies

- Reduce the speed of fans at non-rushed hours.
- Divert duct openings away from receivers (see Fig. 13).

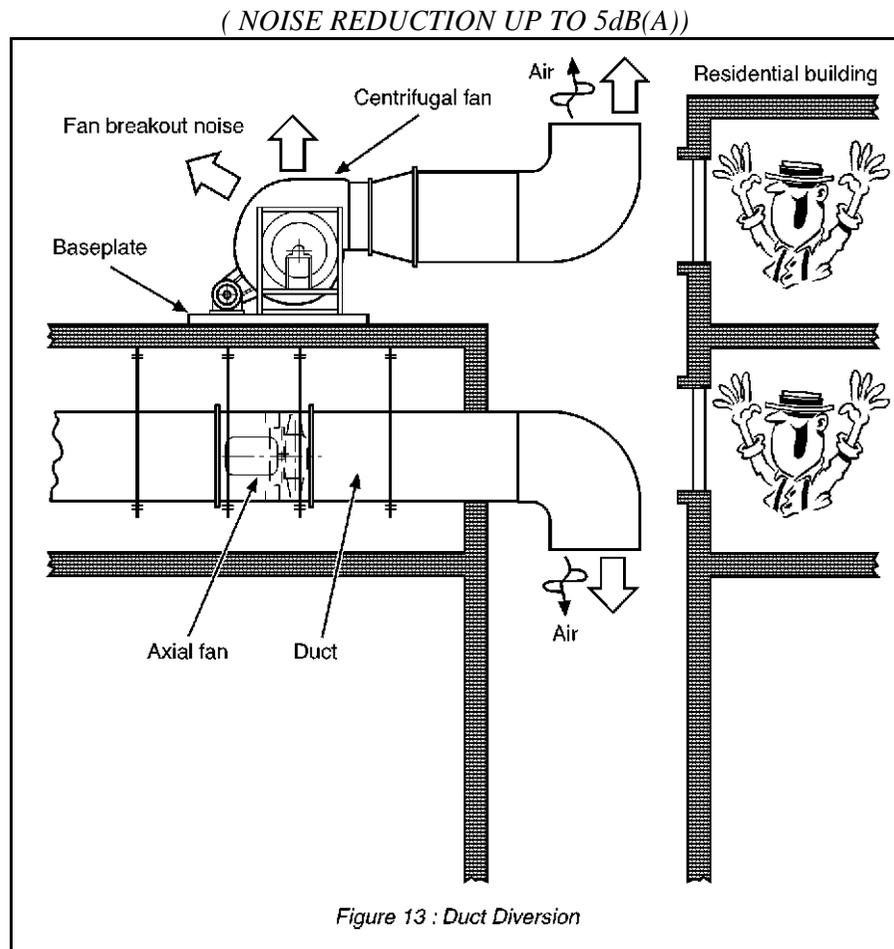

(B) Practical Remedies (Cont'd)


- Install a silencer at air discharge point of a fan (see Fig. 14) so as to absorb noise generated from the fan (see App IX).
- Fabricate a complete enclosure (see Fig. 14) to contain and absorb the noise energy radiated by the source (see App IV).

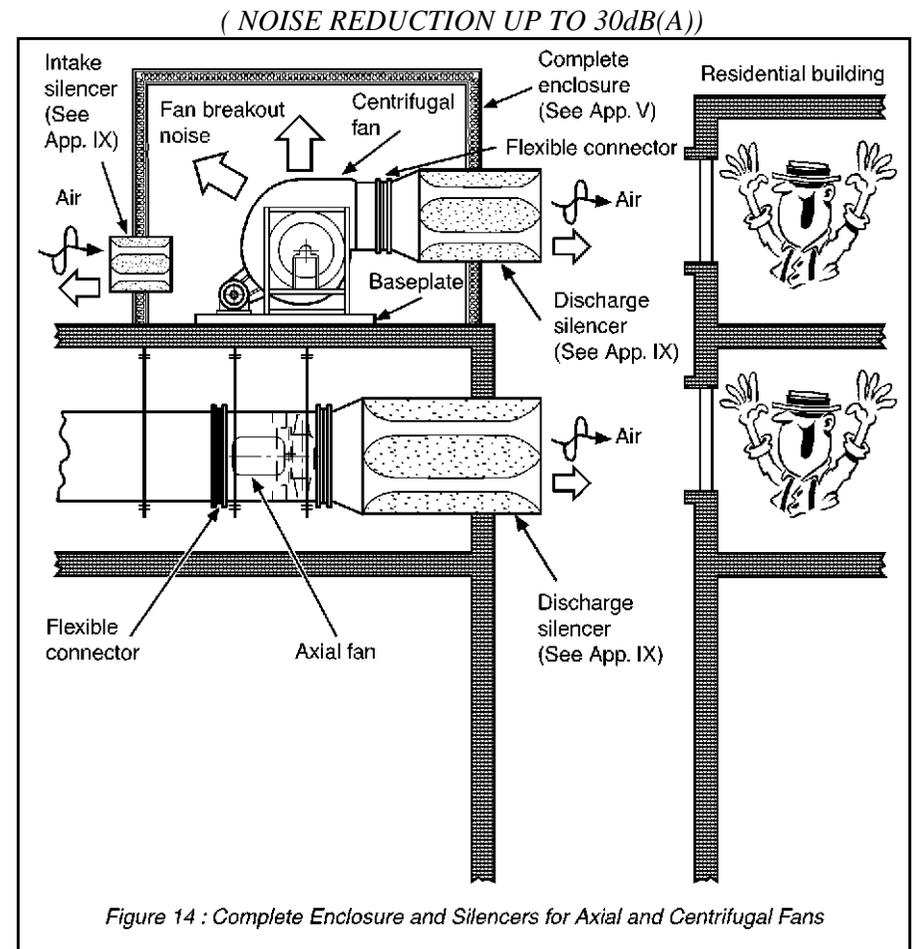

4.6 Structure-borne Noise from Fans


(A) Problems

Vibration from an operating fan may be transmitted to the interior of the building through building structure when the fan is directly mounted on a supporting structure without proper isolation (see Fig. 15). The vibration transmitted may activate the building structure to generate noise which causes noise disturbance to residents inside the building.

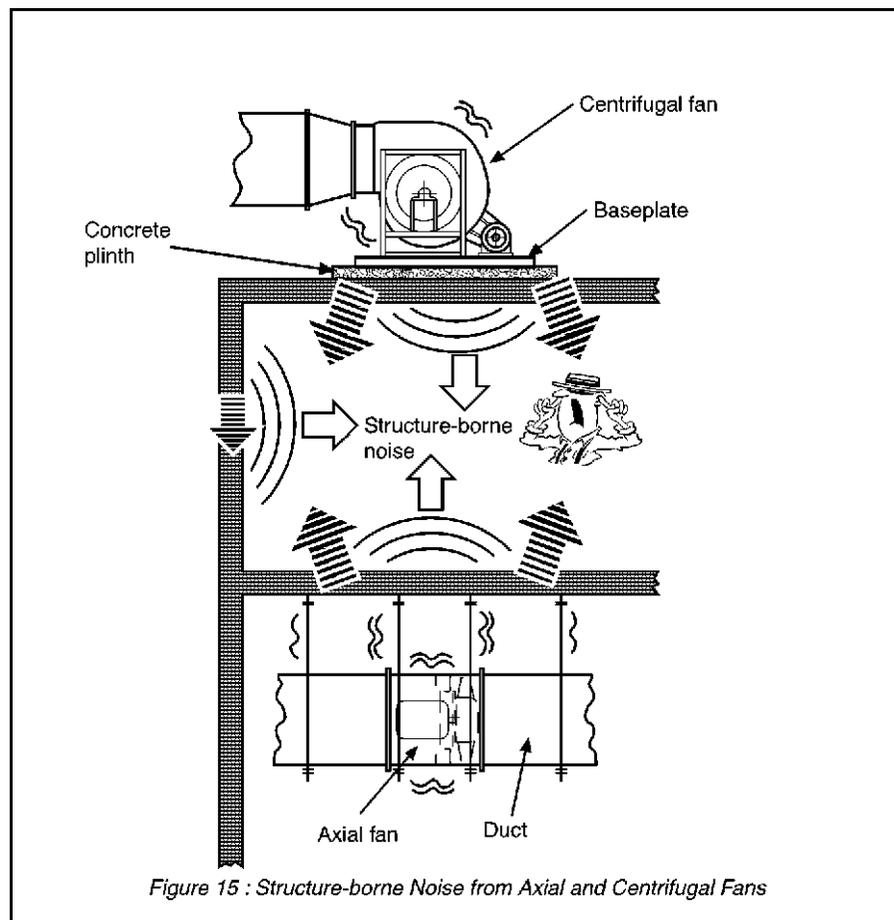

(B) Practical Remedies

- Provide an inertia block to support the fan (see Fig. 16) so as to add rigidity and stability to the ventilation system (see App VII), and provide vibration isolators to support the inertia block (see Fig. 16), thereby isolating it from the building structure (see App VIII).
- Provide flexible connectors between the fan and associated ducts (see Fig. 16), thereby isolating it from the ductwork.

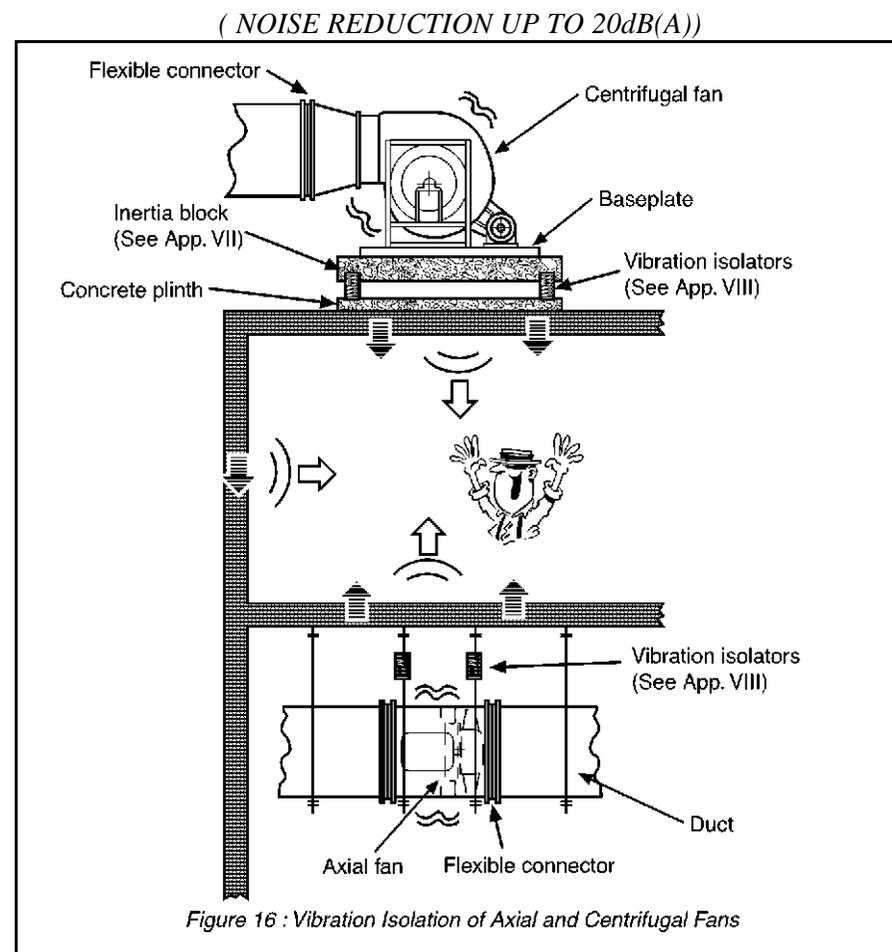



4.7 Air-borne Noise from Ducts

(A) Problems

Air flowing through ducts induces vibration at the duct wall, which generates rumbling noise. In addition, the noise inside the duct can be transmitted to the atmosphere through the duct surface. All of these may cause noise disturbance to nearby residents (see Fig. 17).


(B) Practical Remedies

- Stiffen the vibrating duct surface with supporting webs so as to reduce the movement of the vibrating surface.
- Apply damping material to the vibrating duct surface (see Fig. 18) so as to reduce the movement of vibrating surface.
- Apply composite lagging of sound absorbing materials (see Fig. 18) to contain the radiation of noise.

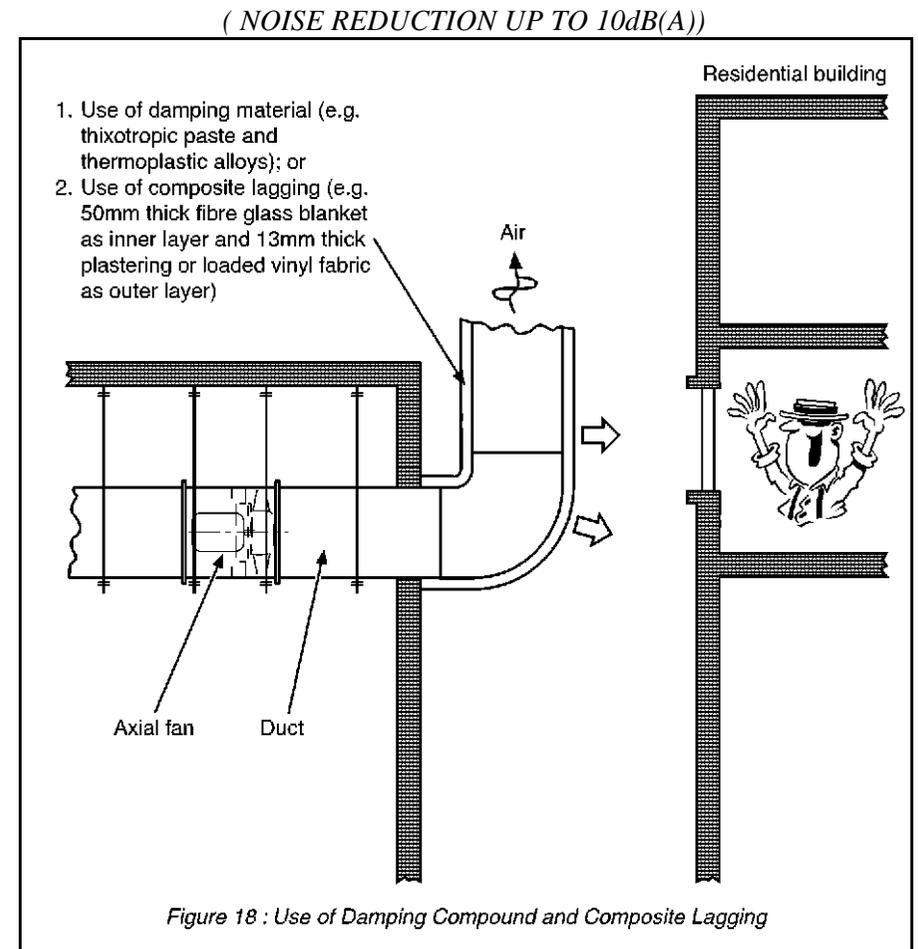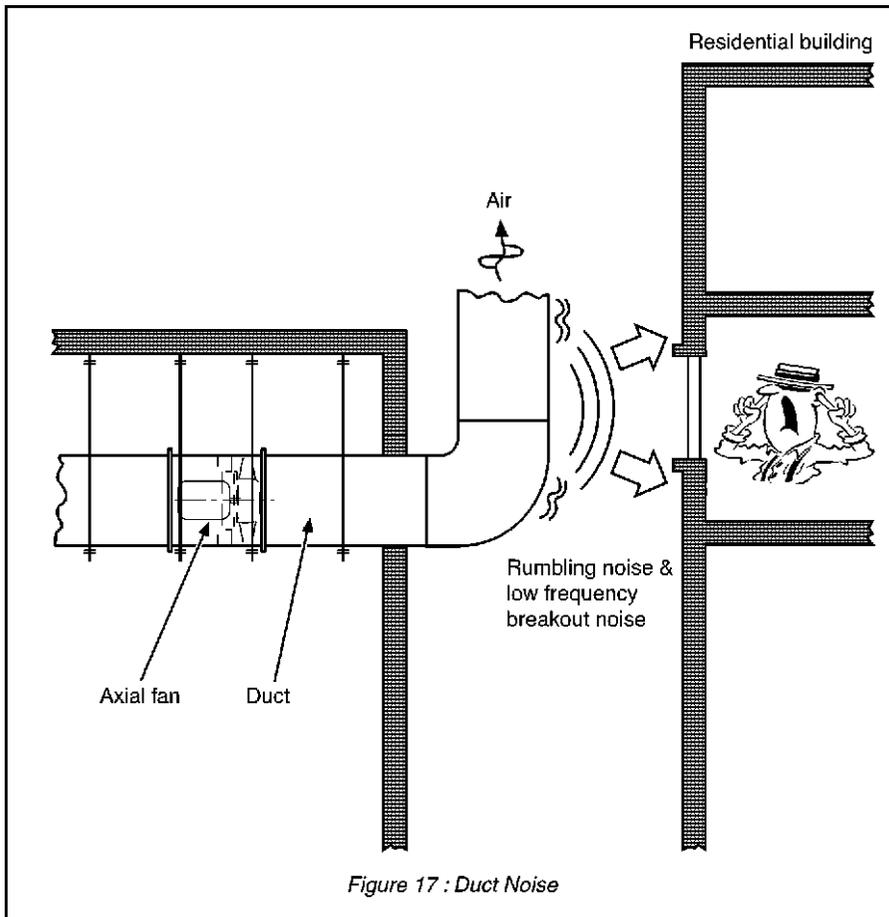

4.8 Important Note

The above only suggests solutions for a particular noise problem. In real life, the noise may be caused by more than one source. In those cases, several remedies may be required simultaneously to solve the problem.

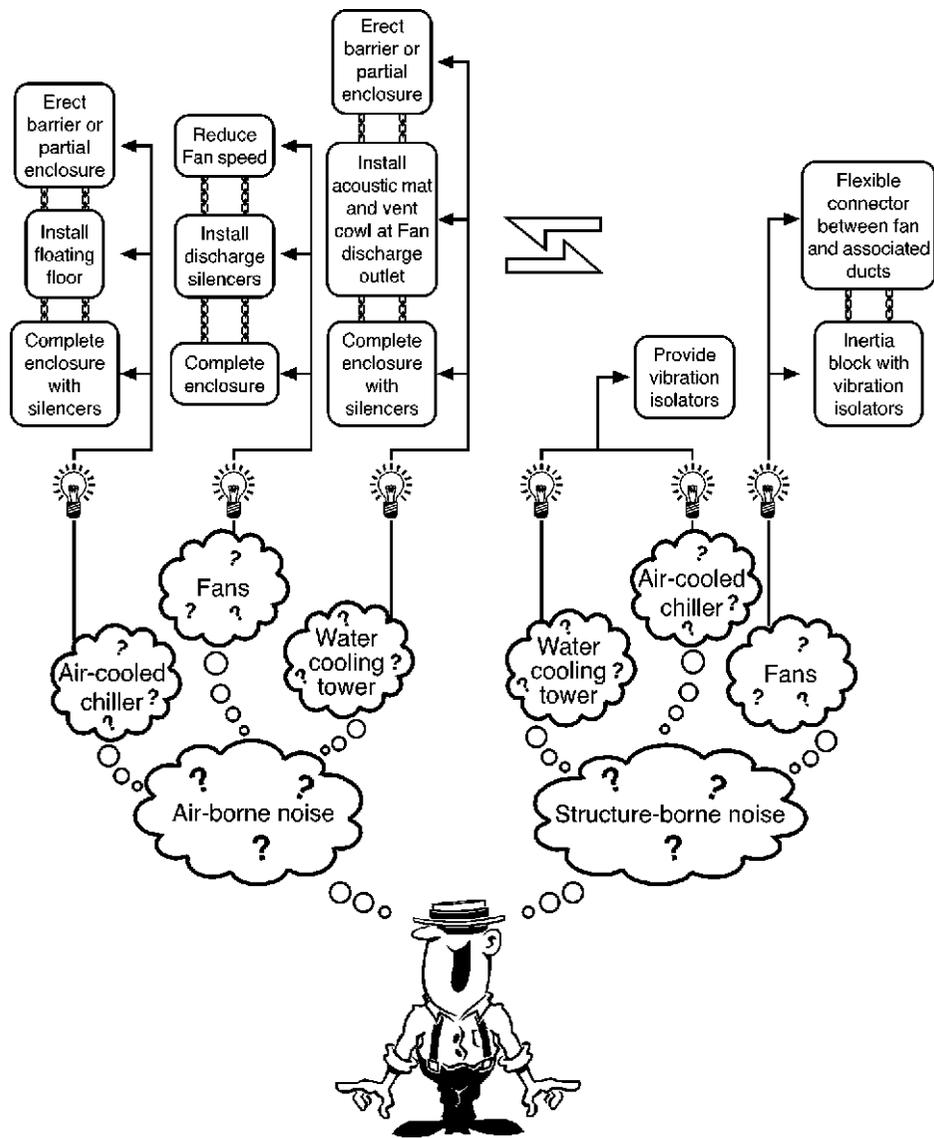

5. RECOMMENDED PRACTICAL REMEDIES FOR DIFFERENT EXCEEDANCE LEVELS

The following recommended practical remedies for different noise exceedance levels are for reference purpose only. No guarantee is given to the performance of the application of the recommended remedies. The reader is advised to seek professional advice from independent experts in case of doubts or complicated problems.

Table 2 : Recommended Practical Remedies

Cause of Problem	Noise Exceedance Level (dB(A))	Recommended Practical Remedies
Air-borne Noise from Chillers	<10	- Barrier and/or silencers
	10 to 20	- Partial enclosure and silencers
	> 20	- Complete enclosure and silencers - Floating floor
Structure-borne Noise from Chillers	< 20	- Vibration isolators
	> 20	- Relocation
Air-borne Noise from Water Cooling Towers	< 10	- Acoustic mat, barrier and lined vent cowl
	10 to 20	- Partial enclosure and silencers
	> 20	- Complete enclosure and silencers
Structure-borne Noise from Water Cooling Towers	< 20	- Vibration isolators
	> 20	- Relocation
Fan Noise in Ductwork	< 5	- Duct opening away from receiver - Fan speed reduction
	5 to 10	- Silencers
	> 10	- Duct opening away from receiver - Silencers
Structure-borne Noise from Fans	< 20	- Inertia block and vibration isolators
	> 20	- Relocation
Rumbling Duct Noise	< 5	- Stiffening of the vibrating duct surface
	> 5	- Damping materials or composite lagging

6. GLOSSARY OF ACOUSTIC TERMINOLOGY

A-Weighted Decibel (dB(A))	- The A-weighted decibel is a unit for measuring noise taking into account the way human ear responds to sound.
Air-borne Noise	- Noise arrives at a point of interest by propagation through air.
Frequency	- The number of repetitive variations of sound pressure per unit of time which is usually stated in Hertz (Hz).
Noise	- Noise is any sound which at the time of reception is unwanted or disturbing.
Sound Power Level	- A measure, in decibels, of the total acoustic power radiated by a given sound source. It is independent of any reference distance or other extraneous factors.
Sound Pressure Level	- A measure, in decibels, of the sound pressure at a particular point. It is dependent upon distance from the source and many other extraneous factors.
Structure-borne Noise	- Noise arrives at a point of interest by propagation through a solid structure.

STATUTORY CONTROL OVER NOISE

Noise generated from ventilation systems is controlled by means of Noise Abatement Notices which may be served on owners or operators of the systems if the emitted noise at a given Noise Sensitive Receiver (NSR), such as a residential building or a school, does not comply with the objective technical criteria in the form of Acceptable Noise Levels (ANL) as set out in the “Technical Memorandum for the Assessment of Noise from Places other than Domestic Premises, Public Places or Construction Sites”(TM).

For a given NSR, with the assessment point at 1m from the exterior of the building facade the ANL in dB(A) is presented in Table 3. However, under certain conditions specified in the TM, when the assessment point is at an internal location of a building, the ANL shall be 10 dB(A) less than that shown in Table 3 and is presented in Table 4. For details of determination of appropriate ANL, the reader is advised to make reference to the aforementioned TM.

Table 3 : Acceptable Noise Level (dB(A)), at 1 m Facade

Type of Area Containing the NSR	Time Period	Day and Evening (0700 to 2300 hours)	Night (2300 to 0700 hours)
	Urban Area		65 – 70
Rural Area		60 – 65	50 – 55

Table 4 : Acceptable Noise Level, dB(A), at an Internal Location

Type of Area Containing the NSR	Time Period	Day and Evening (0700 to 2300 hours)	Night (2300 to 0700 hours)
	Urban Area		55 – 60
Rural Area		50 – 55	40 – 45

NOISE PREDICTION

A simplified air-borne noise prediction method is given below. The reader is reminded that the results obtained from the following procedures should be regarded as indicative data only. The prediction method is inapplicable to noise transmitted through building structure. In case of any doubts, the reader is advised to seek independent experts for technical advice.

Step 1 – Identification of the Most Affected Noise Sensitive Receivers (NSR)

Any domestic premises, hotel, hostel, temporary housing accommodation, hospital, medical clinic, educational institution, place of public worship, library, court of law or performing arts centre is considered to be a NSR. In general, the nearest NSR facade with windows, doors or other openings with respect to the concerned noise sources shall be identified.

Step 2 – Sound Power Levels (SWLs) for Noise Sources

Typical SWLs of ventilation equipment are given in Appendix III for reference. Where practicable, sound power level of individual noise source should be referred to the information provided by the respective manufacturers.

Step 3 – Distance Attenuation

The plan distance or where appropriate the slant distance between individual noise source and the most affected NSR shall be determined and the corresponding distance attenuation shall be obtained from Table 5. These values shall be subtracted from the individual sound power level for each noise source to give the individual sound pressure level for each noise source at the NSR.

Step 4 – Summation of Noise Levels

All individual sound pressure level for each noise source at the NSR shall be added logarithmically in accordance with Table 6 to give a summed noise level.

Step 5 – Correction for Acoustic Reflections

In case the NSR is a building, a positive correction of 3dB(A) shall be applied to the noise level obtained in step 4.

Please note that a correction of 3dB(A) or 6dB(A) for tonality, impulsiveness or intermittency may be required to apply to the noise level obtained in step 5. For details, please refer to the Technical Memorandum for the Assessment of Noise from Places other than Domestic Premises, Public Places or Construction Sites.

Appendix II (Cont'd)

Table 5 : Distance Attenuation at Given Distances

Distance (m)	Attenuation (dB(A))	Distance (m)	Attenuation (dB(A))
1	8	30 to 33	38
2	14	34 to 37	39
3	18	38 to 41	40
4	20	42 to 47	41
5	22	48 to 52	42
6	24	53 to 59	43
7	25	60 to 66	44
8	26	67 to 74	45
9	27	75 to 83	46
10	28	84 to 93	47
11	29	94 to 105	48
12	30	106 to 118	49
13	30	119 to 132	50
14	31	133 to 148	51
15 to 16	32	149 to 166	52
17 to 18	33	167 to 187	53
19 to 21	34	188 to 210	54
22 to 23	35	211 to 235	55
24 to 26	36	236 to 264	56
27 to 29	37	265 to 300	57

For distances greater than 300m, calculation of distance attenuation should be based on standard acoustical principles and practices.

Table 6 : Summation of Noise Levels

Difference in dB(A) Between Two Noise Levels Being Summed	Amount in dB(A) to Add to the Higher Noise Level
0 to 0.5	3.0
1.0 to 1.5	2.5
2.0 to 3.0	2.0
3.5 to 4.5	1.5
5.0 to 7.0	1.0
7.5 to 12.0	0.5
more than 12.0	0

Noise levels should be summed in a pairwise fashion when Table 6 is used and the final total rounded to the nearest whole dB(A), with values of 0.5 or more being rounded upwards.

Appendix II (Cont'd)

Example:

Two equipment (a fan and a chiller) having sound power levels of 95dB(A) and 100dB(A) respectively are installed outdoors. The most affected noise sensitive receiver is identified to be a residential flat which is at 20m and 25m away from the fan and the chiller, respectively. The sound pressure level at the residential flat contributed by the two equipment is estimated below.

NSR (step 1)	Noise Sources	SWL (dB(A)) (step 2)	Distance (m)	Distance Attenuation (dB(A)) (step 3)	Noise Level (dB(A))
Residential Flat	Fan	95	20	34	61
	Chiller	100	25	36	64
Summed Noise Level (dB(A)) (step 4)					66
Correction for Acoustic Reflection (dB(A)) (step 5)					3
Noise Level at NSR (dB(A))					69
ANL (see Table 3)					60
Noise Exceedance					9
Recommended Practical Remedies (see Table 2 in section 5):					
- barrier and / or silencers for the chiller					
- silencer for the fan					

TYPICAL SOUND POWER LEVELS OF VENTILATION EQUIPMENT

The following sound power levels for various rating of ventilation equipment are given in Tables 7a, 7b and 7c for reference purpose only. Where practicable, the sound power level of the concerned equipment should be referred to the respective manufacturers .

Table 7a : Typical Sound Power Levels of Air-cooled Chillers

Cooling Capacity (Ton)	Sound Power Level (dB(A))
50	100
100	102
150	103
200	105
250	106
300	106
350	107
400	109

Table 7b : Typical Sound Power Levels of Water Cooling Towers

Horsepower of Fan (hp)	Sound Power Level (dB(A))
10	96
20	99
30	101
40	102
50	103
60	104
70	105
80	105

Table 7c : Typical Sound Power Levels of Fans

Volume Flowrate (m ³ /hr)	Sound Power Level (dB(A)) at Static Pressure	
	125 Pa	750 Pa
1700	79	95
8600	83	99
17000	85	101
34000	89	105
43000	90	107
86000	93	110
170000	97	113

COMPLETE ENCLOSURES


When a noise reduction of 20dB(A) or more is required, it is generally necessary to use a complete enclosure if the noise problem is a result of air-borne noise transmission. The enclosure should be internally lined with 50mm thick sound absorbing material (e.g. fibre glass). A variety of materials can be utilized for fabricating an enclosure. The sound transmission loss for enclosures using different materials are given in Table 8. Ventilation of enclosures should not be overlooked as most equipment, such as motors, requires an adequate air supply either to prevent overheating or to enable them to function efficiently. A silenced ventilation system incorporating silencers at the air intakes and discharge openings should be employed (see Figures 4 and 9).

Table 8 : Sound Insulation Materials for Enclosures

Material	Thickness (mm)	Surface Density (kg/m ²)	Sound Transmission Loss (dB)		
			125Hz	500Hz	2,000Hz
Plastered Brick Wall	125	240	36	40	54
Compressed Strawboard	56	25	22	27	35
Acoustic Panel (Sandwich type steel sheet with fibre glass)	50	27	19	31	44
Chipboard	19	11	17	25	26
Plaster board	9	7	15	24	32
Plywood	6	3.5	9	16	27

PARTIAL ENCLOSURES


Partial enclosures are structures erected around a source of noise, but not fully enclosing the source and leaving space for natural ventilation, which will be effective only when there is no line of sight between the noise source and the receiver. The use of partial enclosures has advantages over complete enclosures in terms of cost, accessibility, and ventilation, but design and construction should be done carefully. Ideally, a reduction of up to 20dB(A) can be achieved.

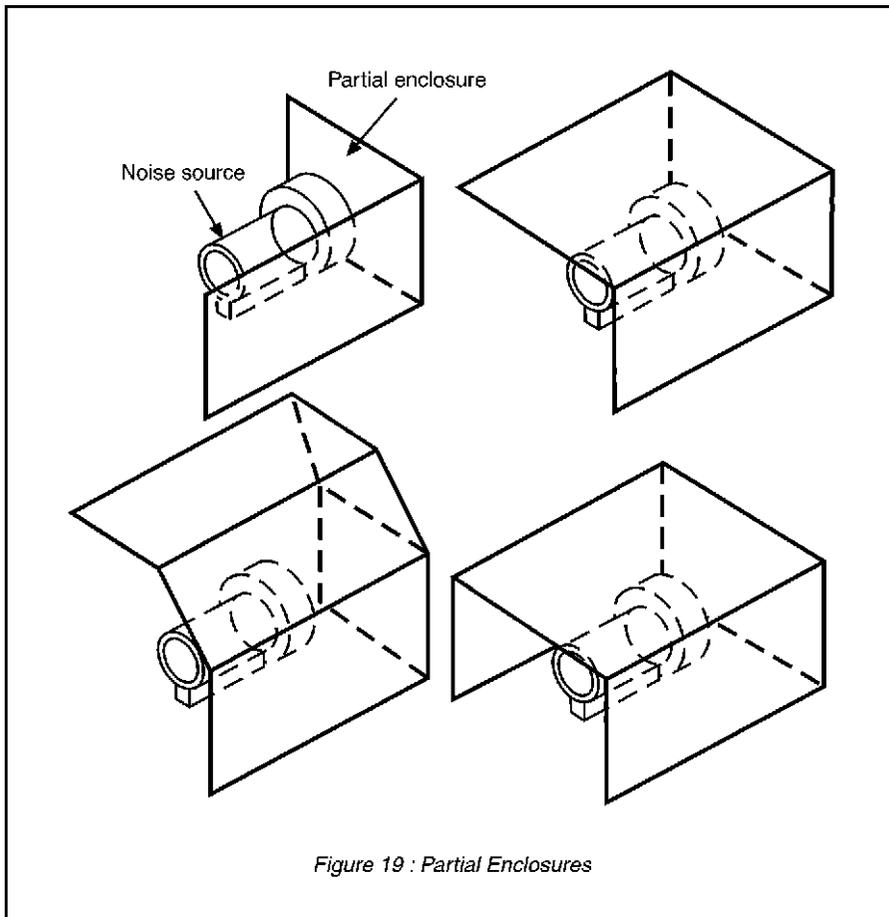

BARRIERS

To be effective, an acoustic barrier needs to be placed as close as possible either to the noise source or the receiving position. There should be no gap or joint in the barrier through which noise will leak. The surface density of the barrier must be at least 10kg/m². Ideally, the length of the barrier should be at least 5 times its height. Line of sight between the source and the receiver must be cut off completely.

A reduction of noise level of between 5dB(A) to 10dB(A) can generally be resulted. Noise reduction will be greater if the barrier is lined with sound absorbing material at the surface of the barrier facing the noise source or is extended as high as possible above the line of sight.

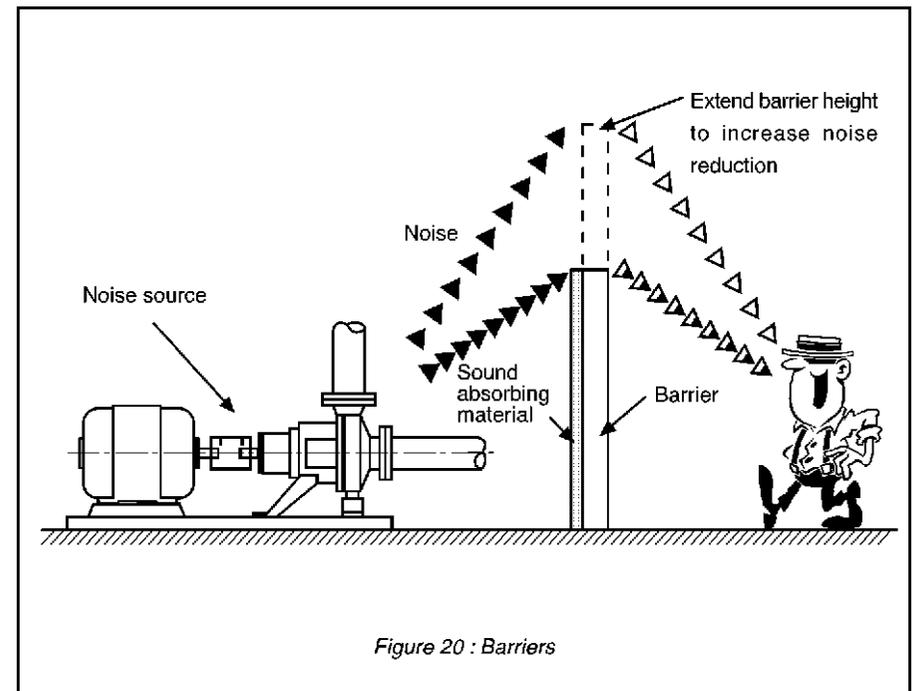

INERTIA BLOCKS

A heavy and rigid inertia block is often used as the base for equipment in order to reduce motion, lower the centre of gravity, minimize the effect of unequal weight distribution of the support equipment, and stabilize the entire vibration isolation system. Generally an inertia block should be at least 15cm thick and very stiff and rigid to avoid significant flexure in any direction. Table 9 shows a recommended weight of inertia block for various rating of ventilation equipment.

However, when the mass of the supported equipment is enormous, such as water cooling towers, there may be no need for additional mass in the form of inertia blocks; a rigid frame (e.g. Reinforced Concrete Beams) to support the entire assembly may be sufficient.

Table 9 : Guide for Inertia Block Selection

Equipment	Power	Speed (rpm)	Weight Ratio(1) at		
			Min Area(2)	Normal Area(3)	Critical Area(4)
Centrifugal or Axial Fans	<3 hp	All	--	--	2
		<600	--	2	3
	3-125 hp	600-1200	--	--	2
		>1200	--	--	2
	>125 hp	<600	--	2	3
		600-1200	--	2	2
		>1200	--	2	2

Note

1. Weight Ratio : Weight of inertia block over weight of equipment mounted on inertia block.
2. Minimum Area : Basement or on-grade slab location.
3. Normal Area : Upper floor location but not above or adjacent sensitive areas.
4. Critical Area : Upper floor location above or adjacent sensitive areas.

VIBRATION ISOLATORS

Motordriven equipment vibrates during operation. The method of reducing vibration transmission to other sensitive areas is to separate the equipment from the supporting structure by vibration isolators. Generally, there are two types of isolators, metal springs and isolation pads, that are widely used for vibration isolation.

i) Metal Spring

Springs are particularly applicable where heavy equipment is to be isolated or where the required static deflections exceed 12.5mm. Static deflection of a spring is a value specified by the suppliers. Selection of appropriate springs is important as this may result in poor isolation efficiency or even amplification of vibration, especially in the case that the vibration frequency is extremely low.

The most important feature of spring mountings is to provide good isolation due to its ability of withstanding relatively large static deflection. Metal springs however have the disadvantage that at very high frequencies vibration can travel along the spring into the adhered structure. This is normally overcome by incorporating a neoprene pad in the spring assembly so that there is no metal-to-metal contact. Most commercially available springs contain such a pad as a standard feature. Figure 21 shows some common spring mountings. Table 10 provides the minimum static deflection required for achieving particular isolation efficiency at different equipment speeds.

Table 10 : Minimum Static Deflection for Various Speeds of Machines



Machine Speed (rpm)	Minimum Static Deflection at Various Isolation Efficiency (mm)			
	1%	5%	10%	15%
3600	14.0	1.5	1.0	0.5
2400	30.5	3.5	2.0	1.5
1800	56.0	6.0	3.0	2.0
1600	71.5	7.5	4.0	3.0
1400	91.5	10.0	5.5	4.0
1200	124.5	13.5	7.0	5.0
1100	150.0	15.5	8.5	6.0
1000	180.5	19.0	10.0	7.0
900	223.0	23.5	12.5	9.0
800	282.0	30.5	15.5	11.0
700	--	38.5	20.5	14.0
600	--	53.5	28.0	19.5
550	--	63.5	33.0	23.0
400	--	117.0	61.0	43.5
350	--	155.0	81.5	56.0
300	--	211.0	109.5	76.5
250	--	--	157.5	109.5

Note

1. The above static deflections are obtained by theoretical calculations, which are for reference only. Commercial products with static deflections greater than about 100mm may not be available in the market.
2. The reader is also recommended to consult independent experts for installation involving vibration isolators with high static deflections.


ii) Isolation Pads

Isolation pads can be made of rubber, neoprene, glass fibre or combination of them. They are relatively cheap, easy for installation and replacement, and have the advantage of good high-frequencies isolation. However, attention should be given to the life of the isolation pads as some of them can be damaged by overload or low temperature. Figure 22 shows some common isolation pads.

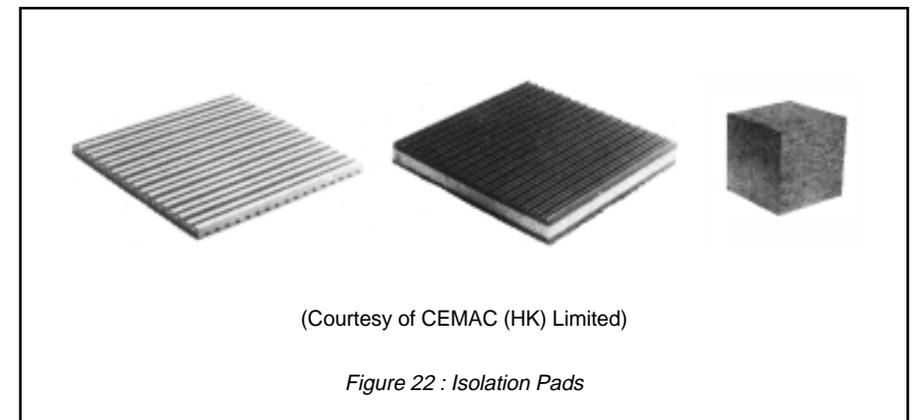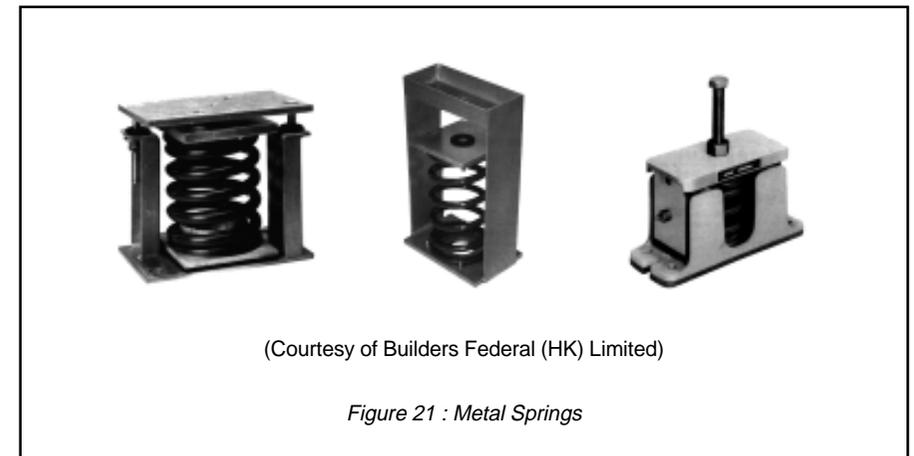

SILENCERS


Silencers are commercially available devices that allow the passage of air while restricting the passage of sound generated from air distribution equipment. They subdivide the airflow into several passages each lined with perforated sheet backed by mineral wool or glass fibre. A silencer usually has a cross section greater than the duct in which it is installed such that noise induced by high air flow velocity passing through the silencer can be avoided. Silencers are available for circular or rectangular ducts, as shown in Figure 23, and are fabricated in modular form in cross section, and in lengths of 0.6, 0.9, 1.2 and 1.5m, etc. They are generally specified by the insertion loss in decibels (dB) in each octave band, so that the degree of match with the sound power distribution of the noise source over the frequencies may be judged. The other important parameter associated with silencers is the resistance to airflow. The use of silencer will inevitably increase the load of the fan and it is essential for engineers to consider both the acoustic and air flow performances during the design stage.

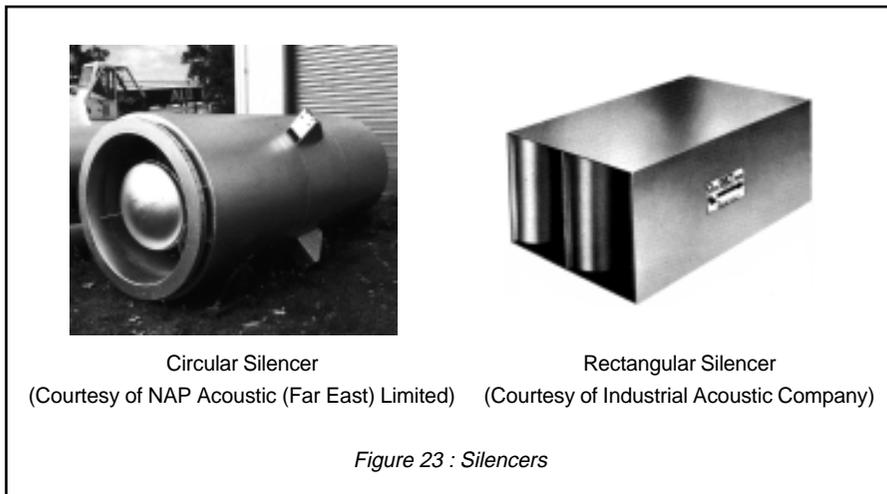

FLOATING FLOORS

A floating floor is a floor which is supported by a structural slab but is completely isolated from the structural slab by resilient support members, so it is nowhere in rigid contact with the structure slab. The floating floor acts as a protective covering for the structural slab. Impacts, no matter in the forms of vibration or noise, on the floating floor will be absorbed substantially before reaching the structural slab. As a result, the room below the structural slab is much quieter than it will be if the same impacts directly strike the structural slab.

Figure 24 shows two types of floating floors which are supported resiliently on isolation pads and fiberglass insulation board. To prevent potential damage of a floating floor, it must be structurally designed for proper strength and the applied load should be within the design limits and uniformly applied. For any type of floating floor, the construction must be monitored carefully to ensure proper installation as it is usually very difficult to remedy defects after completion of the installation.

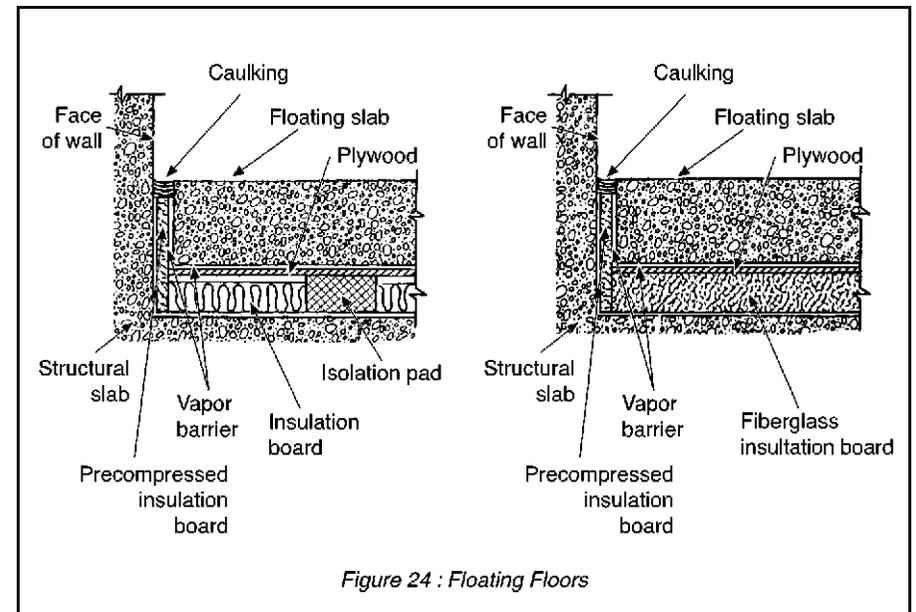

VIBRATION IDENTIFICATION GUIDE


The causes of excessive vibration or noise of a machine can be detected by vibration measurements at various frequencies. A vibration identification guide is given in Table 11.

Table 11 : Vibration Identification Guide

Cause of Excessive Vibration	Frequency Relative to Machine Speed (rpm)
Unbalance	1 x rpm
Defective sleeve bearing	10 to 100 x rpm
Misalignment of coupling or bearing	2 x rpm, sometime 1 or 3 x rpm
Bent shaft	1 or 2 x rpm
Mechanical looseness	1 or 2 x rpm
Defective belt	1 or 2 x belt rpm



GUIDELINES FOR CENTRIFUGAL AND AXIAL FAN INSTALLATIONS

Turbulence results in the generation of noise and an increased static pressure drop in the system. Therefore, the airflow at the entrance and exit of a fan should be as smooth as possible to minimise the generation of turbulence. For this reason, fitting (such as elbows and transitions) should not be placed too close to a fan. This is illustrated in Figure 25 and 26, which show examples of good and bad air flow conditions for fan installation.

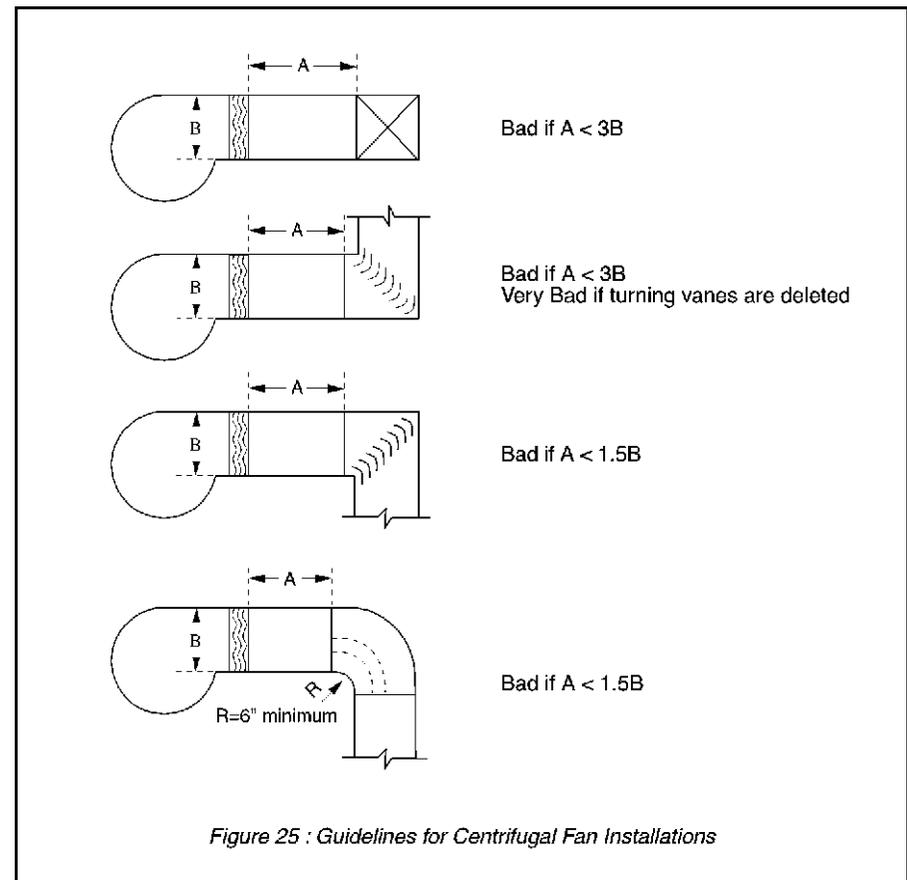

EXAMPLES OF PRACTICAL NOISE CONTROL MEASURES

Successful noise control measures and the corresponding noise reductions are shown in Figure 27 for reference.

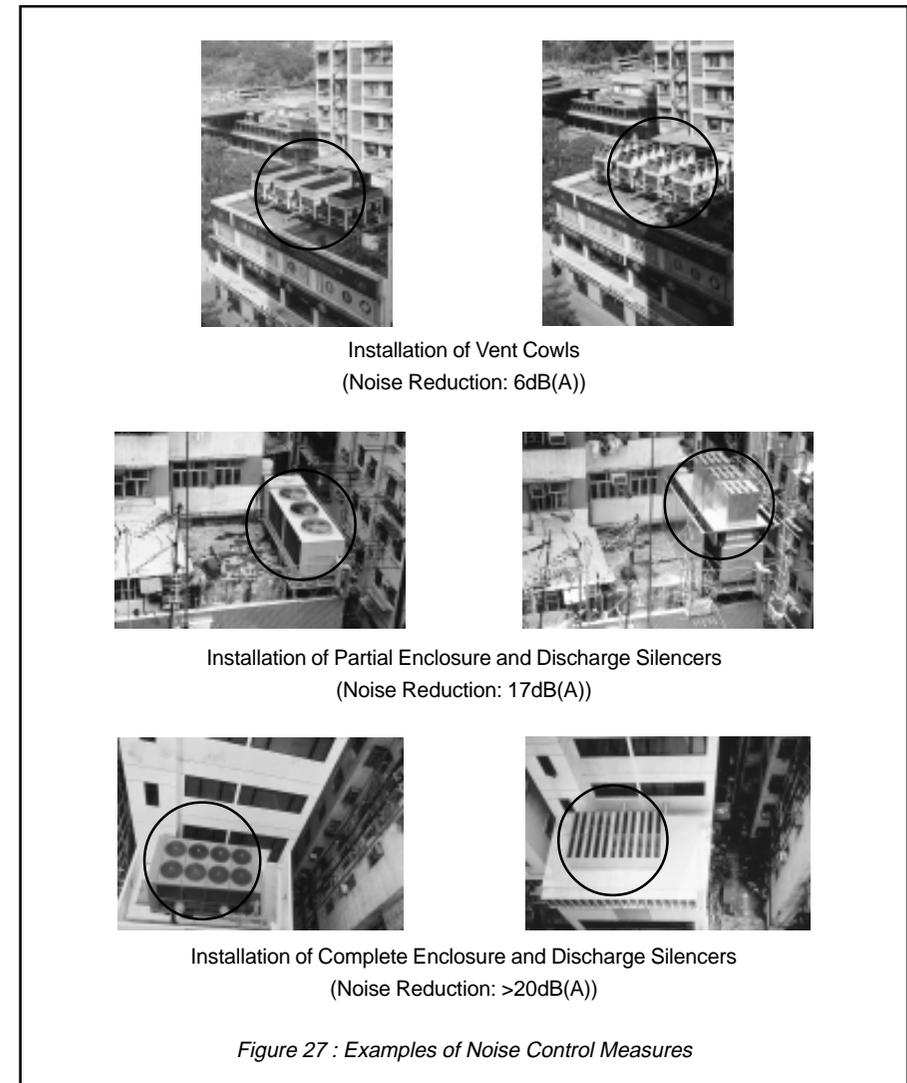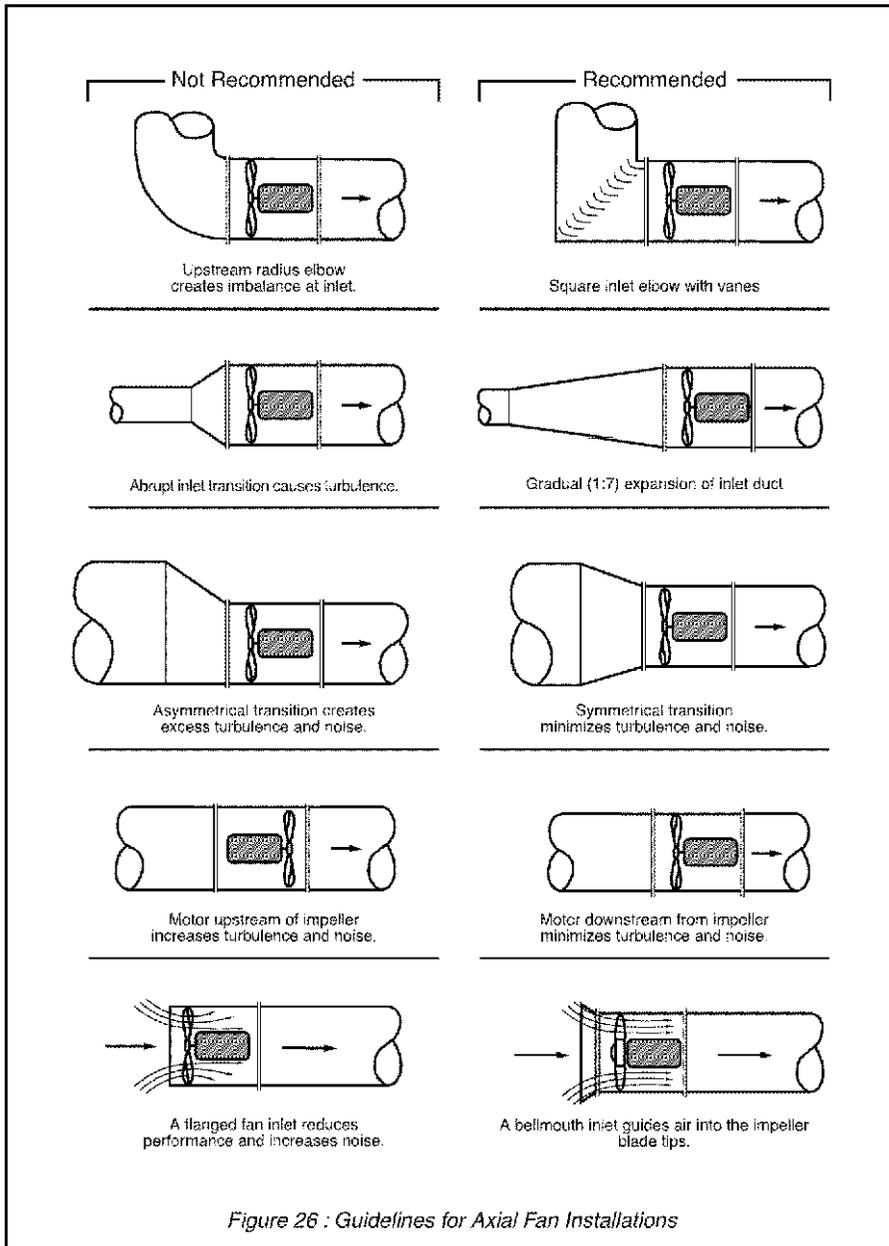

Appendix XIV

REFERENCE:

1. Ann Arbor Science (1980), *Reference Data for Acoustic Noise Control*.
2. Atkins Research and Development (1977), *The Control of Noise in Ventilation Systems - A Designers' Guide*.
3. Bruel & Kjaer (1986), *Noise Control Principles and Practice*.
4. Cyril M. Harris (1991), 3rd Edition, *Handbook of Acoustical Measurements and Noise Control*.
5. David A Harris (1991), *Noise Control Manual - Guidelines for Problems-Solving in the Industrial/Commercial Acoustical Environment*.
6. Federation of Hong Kong Industries (1989), *Handbook on Industrial Noise*.
7. John Roberts and Diane Fairhall (1993), *Noise Control in the Built Environment*.
8. L.L. Faulkner (1976), *Handbook of Industrial Noise Control*.
9. Lewis H. Bell (1982), *Industrial Noise Control Fundamentals and Applications*.
10. Lyle F. Yerges (1978), 2nd Edition, *Sound, Noise & Vibration Control*.
11. Mark E. Schaffer (1991), *A Practical Guide to Noise and Vibration Control for HVAC Systems*.
12. Paul N. Cheremisinoff (1978), *Industrial Noise Control Handbook*.
13. Sound Research Laboratories Limitd (1991), 3rd Edition, *Noise Control in Industry*.
14. Trade and Technical Press Limitd (1983), 5th Edition, *Handbook of Noise and Vibration Control*.

Appendix XV

OTHER RELEVANT NOISE CONTROL MATERIALS

Description	Place where the Hard Copy is Obtainable	Web Site Address
Noise Control Ordinance, Cap. 400	For sale at Government Publications Centres	http://www.justice.gov.hk/blis.nsf/curengord?OpenView&Start=400&Count=25&Expand=400
A Concise Guide to the Noise Control Ordinance	Environmental Protection Department's Offices (Refer to Appendix XVI)	http://www.info.gov.hk/epd/E/epdinhk/noise/index.htm
Technical Memorandum for the Assessment of Noise from Places other than Domestic Premises, Public Places or Construction Sites	Environmental Protection Department's Offices (Refer to Appendix XVI)	http://www.info.gov.hk/epd/E/epdinhk/noise/index.htm
Good Practices on Ventilation System Noise Control	Environmental Protection Department's Offices (Refer to Appendix XVI)	http://www.info.gov.hk/epd/E/epdinhk/noise/index.htm
Good Practices on Pumping System Noise Control	Environmental Protection Department's Offices (Refer to Appendix XVI)	http://www/info.gov.hk/epd/E/epdinhk/noise/index.htm

Appendix XVI

ADDRESSES AND TELEPHONE NUMBERS OF ENVIRONMENTAL PROTECTION DEPARTMENT'S OFFICES

District Covered (Following District Council Boundary)	Address	Enquiry Telephone No.
Kwun Tong, Wong Tai Sin, Sai Kung, Yau Tsim Mong & Kowloon City	Regional Office (East) 5/F., Nan Fung Commercial Centre, 19 Lam Lok Street, Kowloon Bay, Kowloon.	2755 5518
Hong Kong Island & Islands	Regional Office (South) 2/F., Chinachem Exchange Square, 1 Hoi Wan Street, Quarry Bay, Hong Kong.	2516 1718
Tuen Mun, Tsuen Wan, Kwai Tsing & Sham Shui Po	Regional Office (West) 8/F., Tsuen Wan Government Offices, 38 Sai Lau Kok Road, Tsuen Wan, New Territories.	2417 6116
Yuen Long, Sha Tin, Tai Po & North	Regional Office (North) 10/F., Sha Tin Government Offices, 1 Sheung Wo Che Road, Sha Tin, New Territories.	2158 5757
	Revenue Tower Office 33/F., Revenue Tower, 5 Gloucester Road, Wan Chai, Hong Kong.	2824 3773
	Branch Office 28/F., Southorn Centre, 130 Hennessy Road, Wan Chai, Hong Kong.	2573 7746
	Branch Office 8/F., Cheung Sha Wan Government Offices, 303 Cheung Sha Wan Road, Kowloon.	2402 5200